

USER GUIDE

ENGLISH



QUALITY GOLF GPS WATCH

CONGRATULATIONS!

Thank you for purchasing the Easygreen® **WR67™** Golf GPS Watch. We have made every effort in design and manufacture to ensure that the Easygreen **WR67** is a quality product that does its job every time you play.

IMPORTANT

Before you start pushing buttons and measuring distances, please take the time to read this user manual in full to help you understand all the functions and features this product has to offer.

SERIAL NUMBER

On the inside of the box flap is a serial number needed to register your watch for updates (eg. WR67IR#####). Please keep this number safe.

WARNING

FOR YOUR OWN SAFETY, PLEASE READ AND UNDERSTAND THESE WARNINGS AND KEEP THIS USER GUIDE FOR FUTURE REFERENCE BY YOU OR OTHER USERS.

- This product is not a toy and is designed for adult use only.
- Avoid injury and damage to this product by following these warnings and all instructions contained in the user manual.
- DO NOT use the watch while driving any vehicle where its use will cause you to be distracted.
- DO NOT open this device or tamper with it in any way. Any attempt to do so will void the warranty, completely.
- DO NOT drop this product to avoid damage to the electronic equipment or watch housing.
- Keep all packaging material away from children to avoid suffocation or other injuries.

BACKLIGHT ON

(Push) On 5 Secs

BACKLIGHT TOGGLE

(Push 5 Seconds)
On 10 Mins

ENTER / EXIT
Main Menu

BACK
Previous Menu



WR67 OVERVIEW

SCROLL UP

SELECT

SCROLL DOWN

ON / OFF
(Push 5 Seconds)
from TIME
Screen only.

CHARGING BATTERY

To check remaining battery life, press the Menu button, then select "Battery" from Menu 1. The USB cable is compatible with any type of USB port, including A/C chargers. *Note: It is estimated that charging from empty to full will take 2-3 hours. Using GPS functions deplete the battery at a faster rate than non-GPS functions.



To recharge the battery, attach the 4-pin end of the USB cable to the receptors and connect to USB Port. The watch screen will indicate battery FULL status.

TIME / DATE

The easiest way to set the time on the WR67 is By GPS. Make sure you are outside away from buildings and trees, with a clear view of the horizon. Press the menu button, and use the "Front" or "Back" key to scroll to Menu 2, and select Settings (Fig 1). From the Settings 1 menu, select Time-Date (Fig 2), then select Set Time (Fig 3). From the Set Time menu, select By GPS (Fig 4). The WR67 will search for GPS signal, and upon GPS Lock, will return to the Home (Time) screen, where the time and the date will be set via your longitude position. When the selection arrow is pointing at By GPS on the Set Time menu, the other GPS features (Play Golf, Odometer, GPS Status) will update your time via your longitude position as well, which is convenient for the travelling golfer. *Note: In rare instances, time zone boundaries may conflict. In these cases, it may be necessary to manually adjust the time as detailed in the Set Time Manually section. To manually set the time, please download the full WR67 User Manual from www.easygreen.com.hk



Fig 1



Fig 2



Fig 3



Fig 4

*Note: Daylight savings time varies from year to year. When daylight savings is in effect (Spring-Fall), DST should be set to "On." From Fall-Spring, DST should be set to "Off."

PLAY GOLF OVERVIEW

After selecting "Play Golf" from Menu 1, the WR67 will search for satellite signal. Upon GPS Lock, the WR67 will display a list of local courses. Scroll the list using the "Back" and "Front" buttons, and select your course using the "Hazards" button. When you select your course, Hole 1 will display the main screen showing Front, Center, and Back of the Green distances, as well as par information.



PLAY GOLF FUNCTIONS

SHOT DISTANCE

Press at start of measurement. WR67 will track distance until function is exited by pressing Front, Back or Hazards Buttons.

BACK OF GREEN

Press to display the distance to the back of the green for 10 seconds.

GOLF MENU
Battery Life
Change Holes
Exit Game



HAZARDS*
Press to display the distances to key hazards for 10 seconds.

FRONT OF GREEN
Press to display the distance to the front of the green for 10 seconds.

HAZARD ABBREVIATIONS*

LFB - Left Fairway Bunker
MFB - Middle Fairway Bunker
RFB - Right Fairway Bunker
LFW - Left Fairway Water Layout
LFWC - Left Fairway Water Carry
MFW - Middle Fairway Water Layout
MFWC - Middle Fairway Water Carry
RFW - Right Fairway Water Layout
RFWC - Right Fairway Water Carry
FGB - Front Green Bunker
RGB - Right Green Bunker

LGB - Left Green Bunker
BGB - Back Green Bunker
RGW - Right Green Water
FGWC - Front Green Water Carry
FGW - Front Green Water Layout
LGW - Left Green Water
BGW - Back Green Water
CRK - Creek Layout
CRKC - Creek Carry
EOF - End of Fairway

SET TEE TIME

Tee Time is a useful feature that allows you to set a tee time up to seven (7) days, in advance. When a tee time is set, the WR67 will automatically enter Play Golf mode and search for local courses seven (7) minutes prior to the set time. Simply select your course from the list and enjoy your round of golf.

To set a Tee Time, press the menu button and select Tee Time from the Menu 1 (Fig 1). From the set Tee Time screen (Fig 2), press the Hazards button to activate the Hours field. Use the Front and the Back buttons to toggle the time up and down. Press the Hazards button after each field is set to toggle to the next field. After the Day field has been set, the Tee Time feature has been activated, and will show ON. A Flag Icon will also appear in the upper right-hand corner of the Home (Time) screen indicating that a Tee Time is set.

*Note: The Tee Time feature is a one-time setting, meaning once the Tee Time has performed its function, it will not reactivate. To set another Tee Time, follow the steps above. If you play golf at the same time on the same day each week, you can simply select Tee Time from the Golf Menu, then press the Front button to turn the Tee Time ON again (pressing the Front button toggles Tee Time ON/OFF based upon the current Time/Day settings).



Fig 1



Fig 2

AUTO-OFF

The Auto-Off feature is designed to automatically exit Play Golf mode when the preset time has expired. When in Play Golf mode, after the preset time has expired, an Auto-Off message will appear on the watch. Select Resume to return to the round; the Auto-Off message will appear again after 1.5 hours. Select Exit Game to immediately exit the round and return to the Home (Time) screen. If no selection is made for 10 minutes, the WR67 will automatically exit the round and return to the Home (Time) screen, and power down the GPS module to preserve battery.

To set the Auto-Off time, press the Menu button, then scroll to Menu 2 and select Settings (Fig 1). From the Settings 1 menu, select Golf Setup (Fig 2), then select Auto-Off from the Golf Setup Menu (Fig 3). From the set Auto-Off screen (Fig 4), use the Front and Back buttons to toggle the time up and down. Auto-Off is always set to whatever current time is showing on the set Auto-Off page. Time can be set between 1.5 and 9 hours (in .5 hour increments), or select Disable to turn the feature off.



Fig 1



Fig 2



Fig 3



Fig 4

COMPUTER REQUIREMENTS

The WR67 is ready to use out of the box without the requirement of any additional software or hardware; however, a computer and internet access are required in order to receive course updates. Compatible operating systems include:

- PC (Windows XP/Vista/7/8) Browser: Internet Explorer 8 or newer, 32-bit version
- Mac (OS X, version 10.6 INTEL or newer) Browser: Safari (32-bit is recommended)

For more information contact Easygreen, www.easygreen.com.hk

REGISTRATION

With your serial number located on the inside box flap, please register your watch by creating an iGolf account from: www.easygreen.com.hk

Serial # _____

User Name _____

Password _____

Email Address _____

ADDITIONAL COURSE DOWNLOADS

Once registered with iGolf, the WR67 can accommodate downloading up to fifty (50) courses that are not part of the preloaded golf course database. This would include courses in countries not listed on the box such as the USA. To search and download individual courses from these countries, follow the links at: www.easygreen.com.hk

MAP DATABASE AND FIRMWARE UPDATE

As the iGolf database is updated, it may be necessary to download an updated course database to take advantage of new courses and current course updates or corrections. Once the database is completed, the installation of the database from your computer to the watch can take about 20 – 30 Minutes. Follow the links from: www.easygreen.com.hk

Regular updates of the Firmware that run the watch are also available here. Once download is complete, the installation takes between 2 – 3 Minutes.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

WARRANTY

This product is covered by a Two (2) Year Limited Warranty with proof of purchase against defects in workmanship or materials. Easygreen reserves the right to void this warranty if the product has been opened or damaged by improper use.



Dispose of this product correctly as per local and EU laws and regulations.



EUROPEAN DISTRIBUTOR CONTACTS

GERMANY, AUSTRIA, SWITZERLAND, ITALY
HOLLAND
Score Industries GmbH
Wolfratshauser Str. 150
82049 Pullach
Tel: 089-74946700
Fax: 089-74946757
www.score-industries.com
info@score-industries.com

UNITED KINGDOM, IRELAND
Second Chance Ltd.
Units 1 - 4 Pipers Court
Amy Johnson Way
Blackpool, Lancs FY4 2RT
Tel +44 (0)844 8717775
www.secondchance.co.uk
sales@secondchance.co.uk

FRANCE, BELGIUM, LUXEMBOURG, SPAIN, PORTUGAL, ANDORRA
Boston Golf Europe
9 Rue de Mayonnabe
64200 Biarritz, France
Tel. +33 559 43 53 53
www.bostongolf.com
easygreen@bostongolf.com



CONTACT EASYGREEN

Easygreen AB
Lövåsen 2
SE 139 40
Värmdö
Sweden
Tel: +46(0)8 22 65 65
www.easygreen.se
info@easygreen.se

Easygreen (Hong Kong) Ltd.
Flat 11, 4/F, Kwai Cheong Centre
50 Kwai Cheong Road
Kwai Chung, N.T.
Hong Kong
(852) 2489-8288
www.easygreen.com.hk
info@easygreen.com.hk